


INDIVIDUAL SLOPE TOP

1. IF EXPOSED SLOPE TOP ROW ENDS DO NOT EXIST - STEPS ② AND ⑤ CAN BE IGNORED.
2. FOR EXPOSED ENDS ONLY, FASTEN INDIVIDUAL SLOPE END TO SLOPE TOP THRU PRE-PUNCHED HOLES USING (2) MBT200 MACHINE BOLTS AND (2) N201 HEX NUTS PRIOR TO FASTENING ROW END SLOPE TOP TO LOCKER.
3. FASTEN SLOPE TOP TO FRONT FRAME FROM INSIDE LOCKER THRU PRE-PUNCHED HOLES USING (2) SMS102B SHEET METAL SCREWS.
4. FASTEN REAR OF SLOPE TOP TO REAR PANEL OF LOCKER USING EXISTING LOCKER BOLTS.
5. FOR EXPOSED ENDS ONLY, FASTEN SLOPE END TO LOCKER SIDE USING EXISTING LOCKER BOLTS.

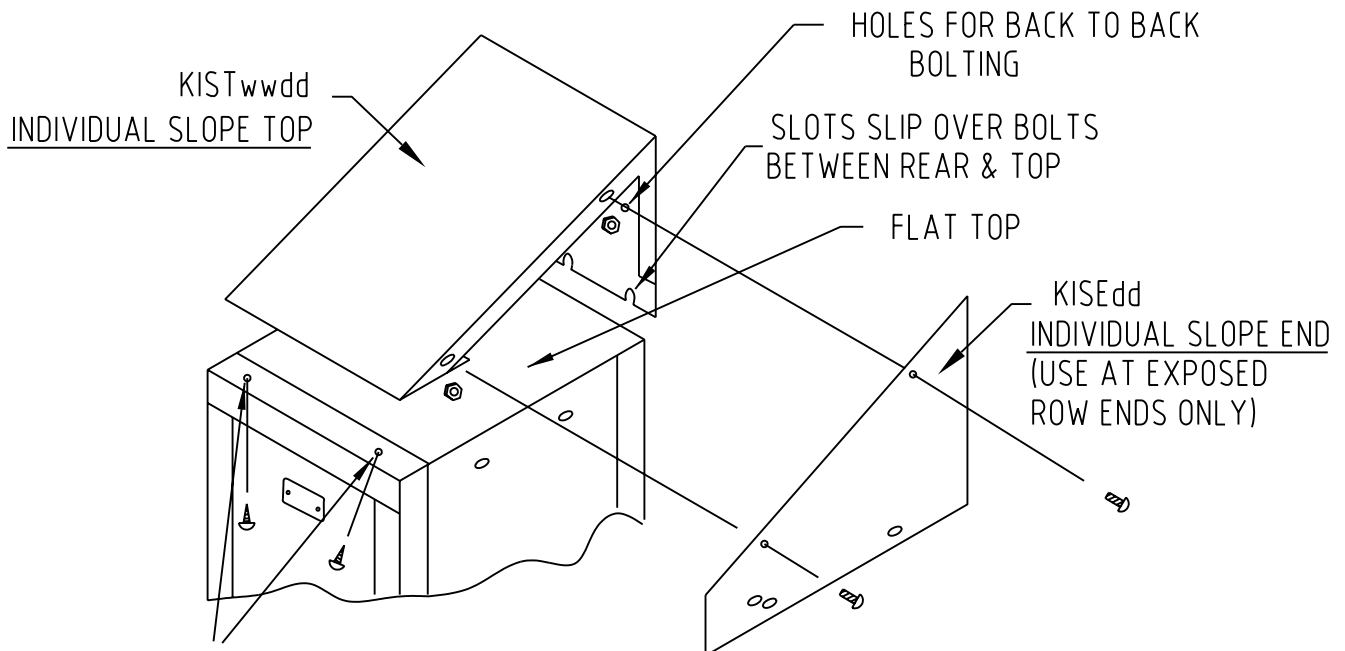

General Instructions

1. Check material received against the packing list. First check the number of packages received and then check the contents of each package.
2. Check material received for damage. If damage has occurred, secure a "damage notation" from the carrier.
3. Identify each part as it is unpacked and put like parts together as close as possible to the working area in which they are to be assembled.
4. Be careful to use the correct hardware as specified in the assembly instructions.

CAUTION

IN THE INTEREST OF SAFETY, ALL LOCKERS MUST BE SECURELY ANCHORED TO THE FLOOR AND/OR WALL.
FOR SAFETY, HANDLE ALL COMPONENTS CAREFULLY AND WEAR WORK-GLOVES WHEN ASSEMBLING LOCKERS.

INSTALL ALL UNITS PLUMB AND TIGHTEN ALL HARDWARE SECURELY.

RETAIN INSTRUCTIONS FOR FUTURE REFERENCE.



401 Jim Moran Blvd., P.O. Box 9601
Deerfield Beach, FL 33442

Phone (954) 429-9155
Fax (954) 428-3843

www.ListIndustries.com