

NOTES

- 1) PLACE TEMPLATE ON TOP OF LOCKER UPPER SHELF
- 2) DETERMINE WHICH ORIENTATION SHOULDER PAD RACK SHOULD BE, AS SHOWN IN TOP VIEW
- 3) DRILL 1/8" DIA BLIND HOLES IN TOP OF LOCKER USING SHOULDER PAD RACK TEMPLATE AS A GUIDE
- 4) SECURE SHOULDER PAD RACK TO TOP OF UPPER SHELF WITH #10 X 3/4" WOOD SCREWS THAT ARE PROVIDED

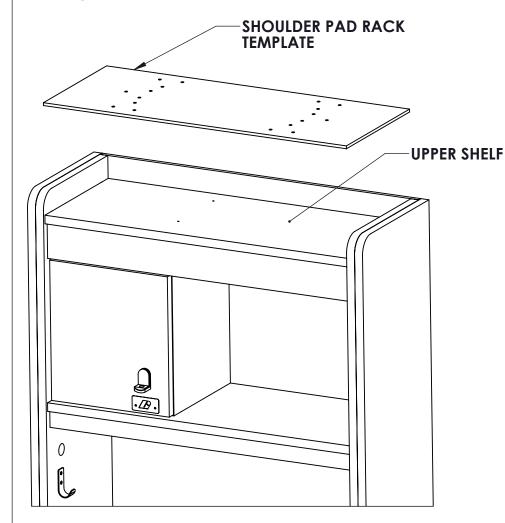

REVISIONS							
ECO	REV	DESCRIPTION	DATE	BY			

OPTION	ORIENTAION				
1	LEFT FACING				
2	FRONT FACING				
3	RIGHT FACING				

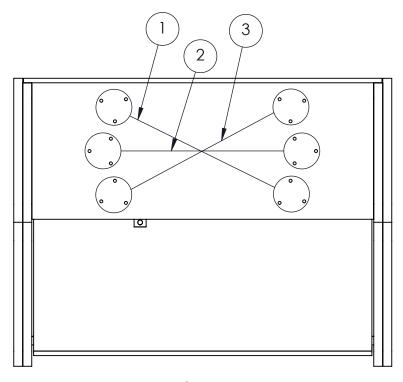

TOP VIEW

	TOLERANCES UNLESS OTHERWISE SPECIFIED								
	INCHES XX. ± .010		enc.º						
	XXX. ± .005	www.ListIndustries.com							
	FRACTIONAL	401 Jim Mora	x 9601			Tel (954) 429-9155			
	X/X. ± 1/64	Deerfield Beach, FL 33442				Fax (954) 428-3843			
	ANGULAR	DRAWN BY	DATE	DESCRI	DESCRIPTION				
	∠ ± 1/2°	MGJ	11/17/2017			JLDER PA			
	UNLESS OTHERWISE SPECIFIED ALL	CHECKED BY	DATE	TEMPLATE INSTRUCTIONS					
	DIMENSIONS ARE IN INCHES. METRIC DIMENSIONS WILL BE								
		APPROVED BY	DATE	SCALE	SHEET	PART NO.	DRAWING NO.	REV.	
N IES.	WITHIN [XX]			:	1 OF 1		SA4106		

THIS DRAWING AND THE INFORMATION ON IT IS THE CONFIDENTIAL PROPERTY OF LIST INDUSTRIES INC.. AND SHALL NOT BE COPIED OR DISCLOSED TO OTHERS WITHOUT WRITTEN PERMISSION. ONLY LIST INDUSTRIES INC. RESERVES THE RIGHT TO ALTER ANY DESIGN. ANY UNAUTHORIZED MODIFICATIONS RELEASES LIST INDUSTRIES INC. FROM ALL LIABILITIES INC. AND SHALL DESIGN. AND SHALL DESIGN.